

# Honeywell

## SOUNDBAR

Owner's manual

Please read the manual carefully before use

Moxie V2000  
Value Series



### Secure Connection Limited

Flat C 61/F, Block A, LA Rossa  
Coastal Skyline 12 Tung Chung  
Water Front Road Tung Chung  
N.T., Hong Kong

support@honeywellconnection.com

Tel.: +852 6201 9710

Web: www.honeywellconnection.com

The Honeywell trademark is used under license from Honeywell International Inc. Honeywell International Inc. makes no representations or warranties with respect to this product. This product is manufactured by Secure Connection Limited, Hong Kong.

All trade names are registered trademarks of respective manufacturers listed. ©2021 Secure Connection Ltd., Hong Kong. All rights reserved.

## Honeywell

[www.honeywellconnection.com](http://www.honeywellconnection.com)

[info@honeywellconnection.com](mailto:info@honeywellconnection.com)

Dear Customer,  
Thank you for purchasing Honeywell Moxie V2000 Soundbar.

In order to facilitate the installation and use of this Multifunctional Soundbar, we recommend that you carefully read this manual, and keep it stored safely. To ensure that you always enjoy quality sound, please use this manual for proper use and maintenance of your product.

If any questions arise during use, please consult this manual. If it is in accordance with the warranty, we kindly welcome you to contact us at:

[support@honeywellconnection.com](mailto:support@honeywellconnection.com)

We welcome any comments or suggestions you may have about our products and service.

## Contents

1. What's in the Box	01
2. Performance Index	01
3. Product Appearance and Structure	02
4. Function Description	02
5. How to Operate	03
5.1. Charging	03
5.2. Powering on	03
5.3. Pairing via Bluetooth	03
5.4. MicroSD Card Operation	03
5.5. 3.5mm AUX Cable Operation	04
5.6. USB Function	04
5.7. Alarm Mode	04
5.8. Clock Mode	04
5.9. Dual Speaker Pairing	04
6. Precautions for Use	05
7. Troubleshooting	05

## What's in the Box


1. Moxie V2000 Soundbar: 1 Unit
2. Micro USB Charging Cable: 1 Unit
3. Micro USB to 3.5mm Aux Cable: 1 Unit
4. User Manual: 1 Unit
5. Warranty Card: 1 Unit

## Performance Index

Product Name	Moxie V2000 Soundbar
Audio Interface	Bluetooth MicroSD Card 3.5mm AUX USB
Charging Interface	Micro USB
Output Power	5W*2
Rated Voltage	3.7V
Bluetooth Version	v5.0
Bluetooth Range <sup>1</sup>	10 meters
Battery Type and Capacity	Lithium Ion, 1200mAh
Charging Time	3 hours
Playback Time <sup>2</sup>	Up to 15 hours
Standby Time	Up to 30 days
Driver Size <sup>3</sup>	52mm*2
Frequency Range	20Hz-20KHz
Signal To Noise Ratio <sup>4</sup>	≥80db
Impedance <sup>5</sup>	4 Ohms
Product Dimension	41*6.2*6.1cm
Product Weight	680g

1. The Bluetooth Range can vary depending on the ambient environment. The range is tested in an outdoor environment with no physical obstacles.
2. Playtime duration can vary depending on actual usage and the volume of the device. Playtime duration is tested at 33% volume of the Bluetooth Audio device.
3. Driver size denotes the diameter of the diaphragm.
4. Signal to Noise Ratio is defined as the ratio of signal power to the noise power. It is represented in decibels.
5. Impedance refers to the load a speaker places on an amplifier. Technically, impedance is the "resistance" a speaker offers to the current supplied by an amplifier because the output current of an amplifier is AC (not DC, like from a battery), this resistance is called impedance.

## Product Appearance And Structure

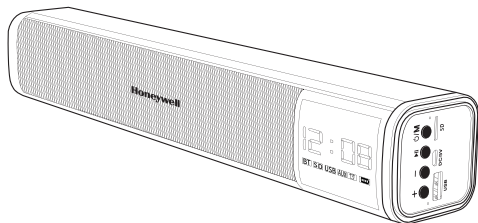

## Function Description

Function	What to do
▶	Short press to Play/Pause audio
	Short press to answer an incoming call
	Short press to end an ongoing call
	Long press to reject an incoming call
	Double press to enable dual soundbar pairing mode (While in Bluetooth pairing mode)
	Triple press to enable/disable alarm
⏻/M	Short press to turn off alarm
	Short press to switch between Bluetooth, AUX, SD card, USB, Clock and Alarm mode
+	Long press to power on/off the device
	Short press to skip to the next track
-	Long press to increase the volume
	Short press to skip to the previous track
	Long press to decrease the volume

Indicator Light Status	Mode
Blue light on	When connected to a Bluetooth device/ When in SD card mode/When in USB mode
Flashing blue light	When in bluetooth pairing mode/Low battery status
Red light on	While charging
Red light off*	When soundbar is fully charged

\*While connected to charging cable

## How to Operate

Before Powering ON for the first time, please charge fully for good battery life.

## Charging

1. Plug the small end of the USB cable into the micro-USB connector port on the Soundbar.
2. Plug the other end into a USB wall charger/computer/power bank that is powered on.

## Powering On

Long press **⏻/M** button on the control panel to power on/off.

## Pairing Via Bluetooth

Connecting any Bluetooth device

1. Press the **⏻/M** button on the control panel of the Soundbar until Bluetooth mode is enabled. Soundbar is now in Bluetooth pairing mode.
2. Open the Bluetooth settings on any Bluetooth device and search for device with name "Moxie V2000" and connect.

**Note:**

1. "Moxie V2000 Soundbar" will automatically re-pair with the last paired device whenever it is within range.
2. Devices with older Bluetooth versions may prompt you to input a passcode key. Please enter "0000" on your device and press OK to successfully connect with "Moxie V2000 Soundbar".

## MicroSD Card Operation

When a microSD card is inserted, the audio/music stored in the microSD card will automatically start playing.

**Note:**

1. Supports MP3 and WAV audio formats only.
2. The soundbar also has a memory function that will recall and continue from the last-played track whenever a microSD Card is reinserted into the soundbar.

### 3.5mm Aux Cable Operation

1. The speaker comes with a special Aux wire with micro-USB at one end and 3.5mm AUX at the other end.
2. Insert the micro-USB end into the charging port and connect the 3.5mm Aux end to your device. "Moxie V2000 Soundbar" is ready to play audio/music through AUX mode.

### USB Function

When a USB Flash drive is inserted, the audio/music stored in the USB Flash drive will automatically start playing.

#### Note:

1. Supports MP3 and WAV audio formats only.
2. The soundbar also has a memory function that will recall and continue from the last-played track whenever a USB Flash drive is reinserted into the soundbar.

### Clock Mode

1. Press the **⏸/M** button on the soundbar until clock mode is enabled.
2. Short press the **▶||** button to adjust time of the clock.
3. Short press **▶||** button to switch between hours and minutes on the clock timer.
4. Short press the **+** or **-** button to increase or decrease the clock time respectively.
5. Short press **▶||** button until SAVE appears on the digital display to set the clock on desired time.

### Alarm Mode

1. Press the **⏸/M** button on the soundbar until clock mode is enabled.
2. Short press the **▶||** button until the alarm clock timer appears.
3. Short press **▶||** button to switch between hours and minutes on the alarm clock timer.
4. Short press the **+** or **-** button to increase or decrease the alarm clock timer respectively.
5. Short press **▶||** button until SAVE appears on the digital display to set the alarm clock on desired time.
6. Once the alarm time is set, press the **▶||** button 3 times to set the soundbar on Alarm ON or Alarm OFF mode, to enable or disable the alarm respectively.
7. Once the alarm goes off short press the **▶||** button to turn off the alarm.

### Dual Soundbar Pairing

1. Power on both the soundbars.
2. While both the soundbars are in Bluetooth pairing mode, double press the **▶||** button on both the soundbars simultaneously to pair the soundbars together and wait for the "du" sound.

### Dual Soundbar Pairing (Continued)

3. Connect the soundbar to a Bluetooth device. Now you can play music on both the soundbars at the same time from a single Bluetooth device.
4. Long press the **▶||** button on 1 soundbar to disable dual soundbar pairing mode.

#### Note:

Performance may vary based on a mobile device, distance and environmental factors.

### Precautions for Use

- Do NOT use at high volume for any extended period to avoid hearing damage.
- Do NOT use while driving for phone calls or any other purpose.
- Do NOT use if there is any loud unusual noise. If this happens, please contact us at [support@honeywellconnection.com](mailto:support@honeywellconnection.com).
- This product contains small parts which may be a choking hazard. Not suitable for children under the age of 3.
- This product contains magnetic material. Consult your physician before using the product in case you have a medical implant of any type.
- Do NOT attempt to disassemble this product as this may lead to a hazard and will void the warranty.
- Use this product only with the power supply provided along with this product (applicable for selected models only).
- Do NOT use this product near any form of excessive heat such as gas appliances and heating appliances.

### Troubleshooting

Problem	Solution
No Power	<ul style="list-style-type: none"><li>• Charge the battery.</li><li>• Connect to the power source.</li></ul>
Unsuccessful Bluetooth pairing	<ul style="list-style-type: none"><li>• Restart the product and try pairing again.</li><li>• Disable Bluetooth mode in your device and then re-enable it.</li></ul>
Poor audio quality	<ul style="list-style-type: none"><li>• Make sure the product is in the Bluetooth range.</li></ul>
Low or no volume	<ul style="list-style-type: none"><li>• Increase the volume on "Moxie V2000 Soundbar" and/or connected device.</li></ul>
Undiscoverable in Bluetooth pairing	<ul style="list-style-type: none"><li>• The product may be paired to a different device, disconnect from the paired device.</li><li>• "Moxie V2000 Soundbar" is not in Bluetooth mode, change to Bluetooth mode.</li></ul>