

Honeywell

BLUETOOTH SPEAKER

Owner's manual

Please read the manual carefully before use



Moxie V100
Value Series

Secure Connection Limited

Flat C 61/F, Block A, LA Rossa
Coastal Skyline 12 Tung Chung
Water Front Road Tung Chung
N.T., Hong Kong

support@honeywellconnection.com

Tel.: +852 6201 9710

Web: www.honeywellconnection.com

The Honeywell trademark is used under license from Honeywell International Inc. Honeywell International Inc. makes no representations or warranties with respect to this product. This product is manufactured by Secure Connection Limited, Hong Kong.

All trade names are registered trademarks of respective manufacturers listed. ©2021 Secure Connection Ltd., Hong Kong. All rights reserved.

Honeywell

www.honeywellconnection.com
info@honeywellconnection.com

Dear Customer,
Thank you for purchasing Honeywell Moxie V100 Bluetooth Speaker.

In order to facilitate the installation and use of this Multifunctional Bluetooth Speaker, we recommend that you carefully read this manual and keep it stored safely. To ensure that you always enjoy quality sound, please use this manual for proper use and maintenance of your product.

If any questions arise during use, please consult this manual. If it is in accordance with the warranty, we kindly welcome you to contact us at:

support@honeywellconnection.com

We welcome any comments or suggestions you may have about our products and service.

Contents

1. What's in the Box	01
2. Performance Index	01
3. Product Appearance and Structure	02
4. Function Description	03
5. How to Operate	04
5.1. Charging	04
5.2. Powering on	04
5.3. Pairing via Bluetooth	04
5.4. Smart Talk	04
5.5. MicroSD Card Operation	05
5.6. 3.5mm AUX Cable Operation	05
5.7. USB Operation	05
5.8. Dual Speaker Pairing	05
6. Precautions for Use	06
7. Troubleshooting	06

What's in the Box

- | | |
|---|--------------------------|
| 1. Moxie V100 Bluetooth Speaker: 1 Unit | 3. User Manual: 1 Unit |
| 2. 2 in 1 (Micro USB & AUX Cable): 1 Unit | 4. Warranty Card: 1 Unit |

Performance Index

Product Name	Moxie V100 Bluetooth Speaker
Audio Interface	Bluetooth, MicroSD Card, USB
Charging Interface	Micro USB
Output Power	3W
Rated Voltage	5V
Bluetooth Version	v5.0
Bluetooth Range ¹	10 meters
Battery Type and Capacity	Lithium Ion, 300mAh
Charging Time	1 hour
Playback Time ²	Up to 6 hours
Standby Time	Up to 50 hours
IP Rating ³	IPX4
Driver Size ⁴	52mm
Frequency Range	20Hz-20KHz
Signal To Noise Ratio ⁵	≥75dB
Impedance ⁶	4 Ohms
Product Dimension	9*9*4cm
Product Weight	160g

- The Bluetooth Range can vary depending on the ambient environment. The range is tested in an outdoor environment with no physical obstacles.
- Playtime duration can vary depending on actual usage and the volume of the device. Playtime duration is tested at 33% volume of the Bluetooth Audio device.
- The IP rating determines how resistant something is to environmental elements. Most IP numbers read IPXX, each "X" being a placeholder for a number. The first number represents the level of resistance to dust/particles and the second representing its ability to withstand liquid.
- Driver size denotes the diameter of the diaphragm.
- Signal to Noise Ratio is defined as the ratio of signal power to the noise power, it is represented in decibels.
- Impedance refers to the load a speaker places on an amplifier. Technically, impedance is the "resistance" a speaker offers to the current supplied by an amplifier because the output current of an amplifier is AC (not DC, like from a battery), this resistance is called impedance.

Product Appearance And Structure



Function Description

Function	What to do
▶	Short press: Play/Pause (While playing music)
	Short press: Answer an incoming call
	Short press: End the ongoing call
	Long press: Reject an incoming call
	Long press: Enable dual speaker pairing mode (While in Bluetooth pairing mode)
⏻	Slide to power on/off the device
+	Short press: Increase the volume
	Long press: Skip to the next track
-	Short press: Decrease the volume
	Long press: Skip to the previous track
M	Double press: Switch between Bluetooth, Aux, MicroSD card and USB input mode

Indicator Light Status	Mode
Solid blue light	Power on/Music paused/Bluetooth device connected
Blue light off	Power off
Rapid flashing blue light	Pairing mode
Slow flashing blue light	Playing music/during call
Solid red light	Charging
Flashing red light	Low battery
Red light off*	Fully charged

*While connected to charging cable

How to Operate

Before Powering ON for the first time, please charge fully for good battery life.

Charging

1. Plug the small end of the USB cable into the micro-USB connector port on the speaker.
2. Plug the other end into a USB wall charger/computer/power bank that is powered on.

Powering on

Slide the  button to power on/off the device.

Pairing via Bluetooth

Connecting any Bluetooth device

1. On powering on, the speaker is in Bluetooth pairing mode automatically.
2. Open the Bluetooth settings on any Bluetooth device and search for device with name "Moxie V100" and connect.

Note:

1. "Moxie V100 Bluetooth Speaker" will automatically re-pair with the last paired device whenever it is within range.
2. Devices with older Bluetooth versions may prompt you to input a passcode key. Please enter "0000" on your device and press OK to successfully connect with "Moxie V100 Bluetooth Speaker".

Smart Talk



Answer/Reject calls by single tapping the Left/Right Earbud.

MicroSD Card Operation

When a microSD card is inserted, the audio/music stored in the microSD card will automatically start playing.

Note:

1. Supports MP3 and WAV audio formats only.
2. The speaker also has a memory function that will recall and continue from the last-played track whenever a microSD Card is reinserted into the speaker.

3.5mm AUX Cable Operation

Insert the 3.5mm AUX cable into the AUX input. "Moxie V100 Bluetooth Speaker" is ready to play audio/music through AUX mode.



USB Operation

When a USB Flash drive is inserted, the audio/music stored in the USB Flash drive will automatically start playing.

Note:

1. Supports MP3 and WAV audio formats only.
2. The speaker also has a memory function that will recall and continue from the last-played track whenever a USB Flash drive is reinserted into the speaker.

Dual Speaker Pairing

1. Power on both the speakers.
2. While both the speakers are in Bluetooth pairing mode, long press the  button on 1 speaker to pair the speakers together.
3. Connect the speaker to a Bluetooth device. Now you can play music on both the speakers at the same time from a single Bluetooth device.
4. Press the  on 1 speaker to disable dual speaker pairing mode.

Note:

Performance may vary based on a mobile device, distance and environmental factors.

Precautions for Use

- Do NOT use at high volume for any extended period to avoid hearing damage.
- Do NOT use while driving for phone calls or any other purpose.
- Do NOT use if there is any loud unusual noise. If this happens, please contact us at support@honeywellconnection.com.
- This product contains small parts which may be a choking hazard. Not suitable for children under the age of 3.
- This product contains magnetic material. Consult your physician before using the product in case you have a medical implant of any type.
- Do NOT attempt to disassemble this product as this may lead to a hazard and will void the warranty.
- Use this product only with the power supply provided along with this product (applicable for selected models only).
- Do NOT use this product near any form of excessive heat such as gas appliances and heating appliances.

Troubleshooting

Problem	Solution
No Power	<ul style="list-style-type: none">• Charge the battery.• Connect to the power source.
Unsuccessful Bluetooth pairing	<ul style="list-style-type: none">• Restart the product and try pairing again.• Disable Bluetooth mode in your device and then re-enable it.
Poor audio quality	<ul style="list-style-type: none">• Make sure the product is in the Bluetooth range.
Low or no volume	<ul style="list-style-type: none">• Increase the volume on "Moxie V100 Bluetooth Speaker" and/or connected device.

Troubleshooting (Continued)

Problem	Solution
Undiscoverable in Bluetooth pairing	<ul style="list-style-type: none">• The product may be paired to a different device, disconnect from the paired device.• "Moxie V100 Bluetooth Speaker" is not in Bluetooth mode, change to Bluetooth mode.